



Selecting Passcode Lock makes "Set Passcode" become selectable (no longer grayed out)

Turning off "Passcode Lock" (un-checking) will require the current passcode.

Turning off "Passcode Lock" (un-checking) will reset the passcode and require a user to re-enter a new passcode if it is re-enabled.

"Set Passcode" is conditional – if a Passcode is set and active "Change Passcode" would appear instead.

"Set Passcode" is not selectable if "Passcode Lock" is not enabled.

New Screen

New Screen

